
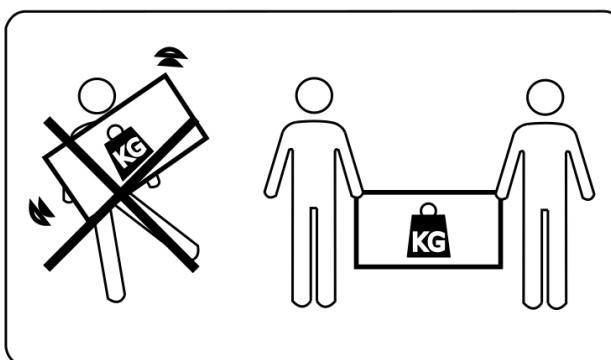
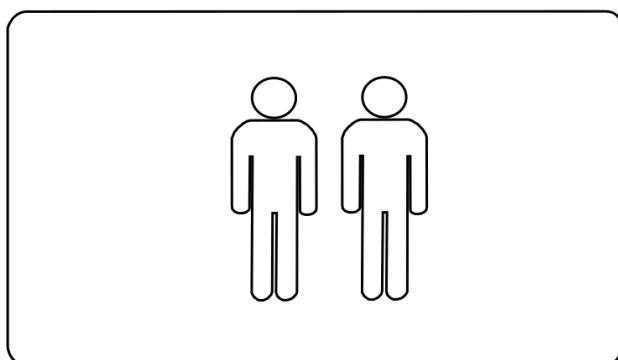
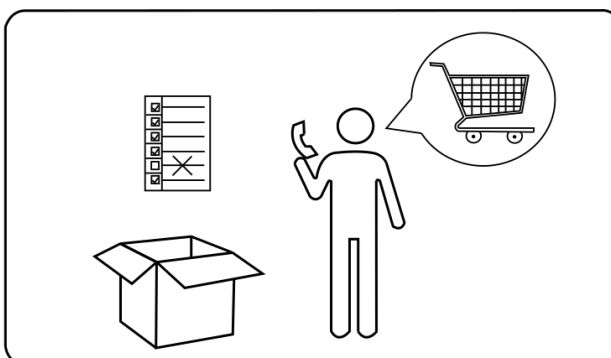
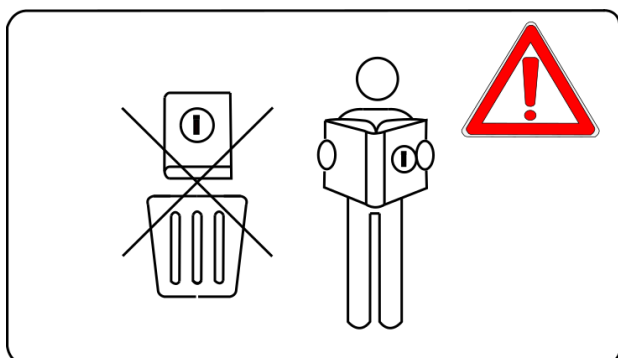


Eva Max kampas

Eva Max corner sofa

Eva Max угловой диван

SURINKIMO INSTRUKCIJA / ASSEMBLY INSTRUCTION / ИНСТРУКЦИЯ ПО МОНТАЖУ

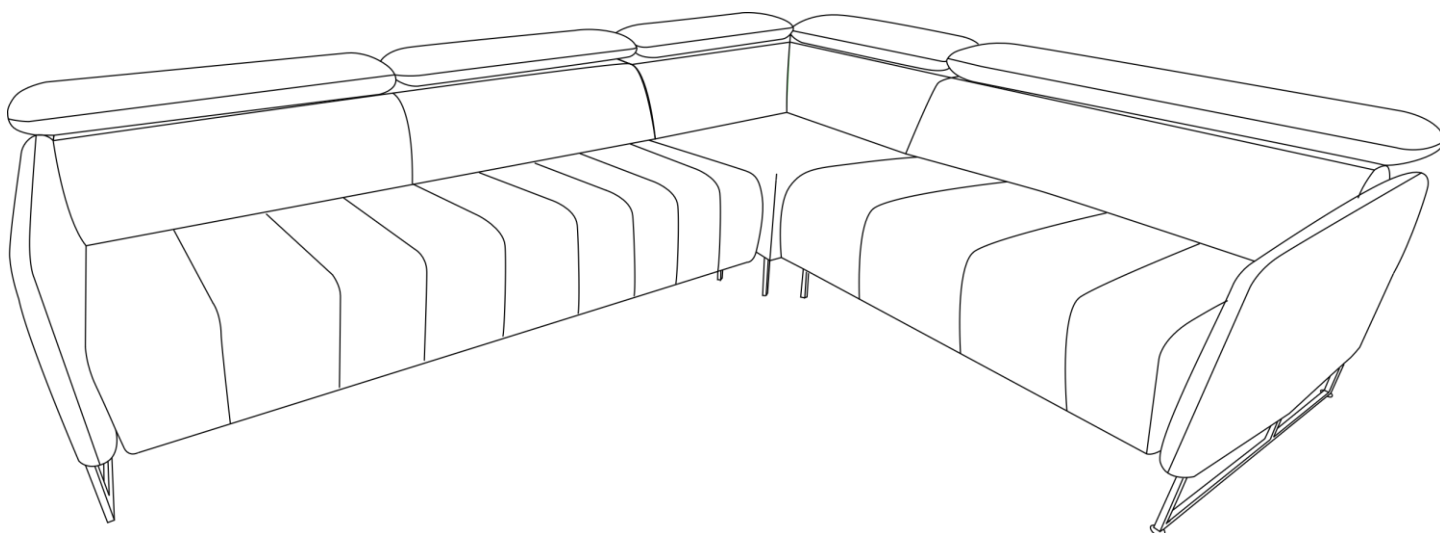


SURINKIMO INSTRUKCIJA / ASSEMBLY INSTRUCTION / ИНСТРУКЦИЯ ПО МОНТАЖУ

Eva Max kampas


Eva Max corner sofa

Ева Мах угловой диван


1

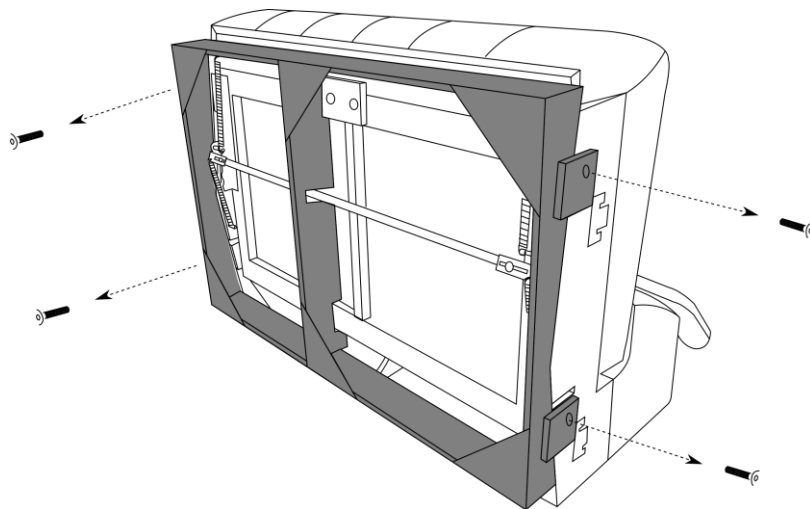


2

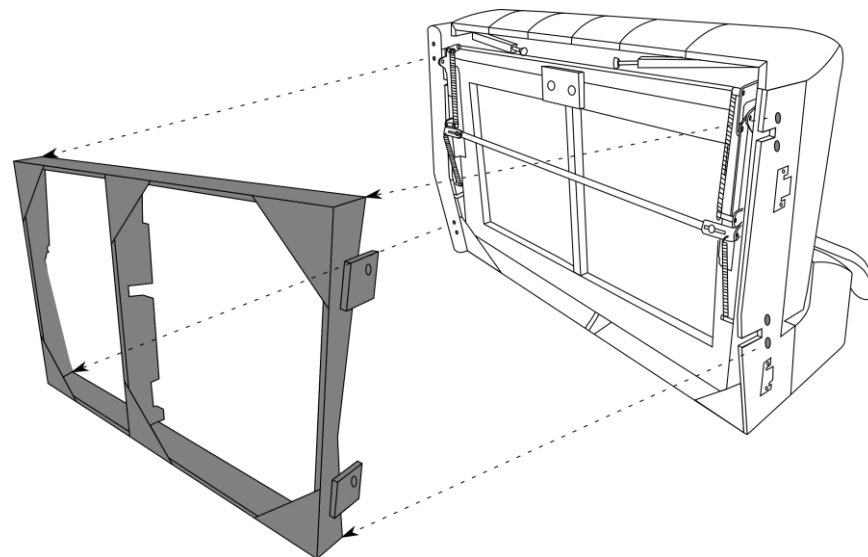

3

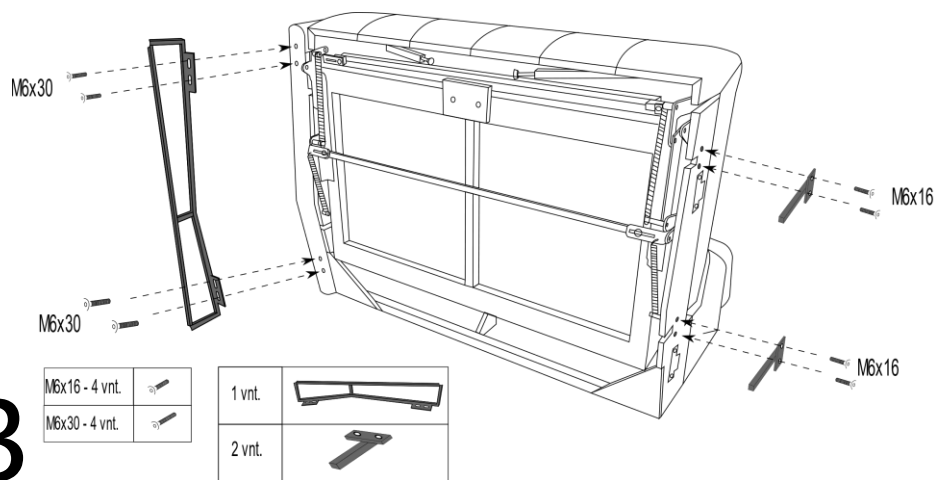

4

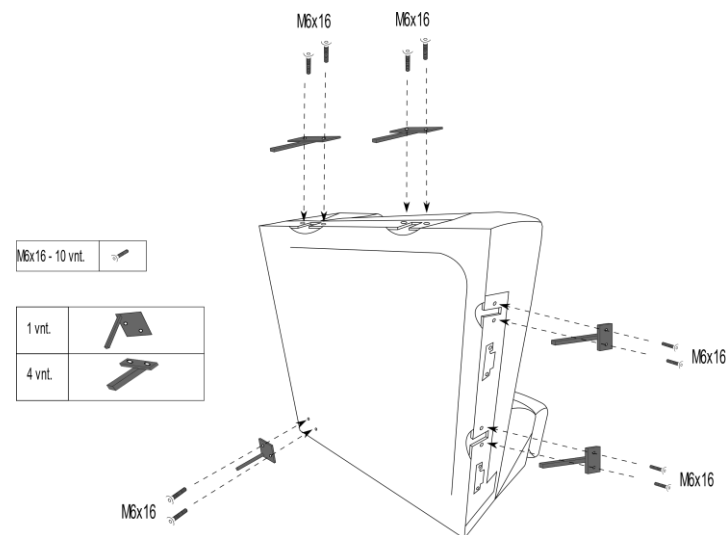





Eva Max kampas


Eva Max corner sofa

Eva Max угловой диван

5

M6x35 - 4 vnt.	
M6x30 - 4 vnt.	

1 vnt.	
2 vnt.	

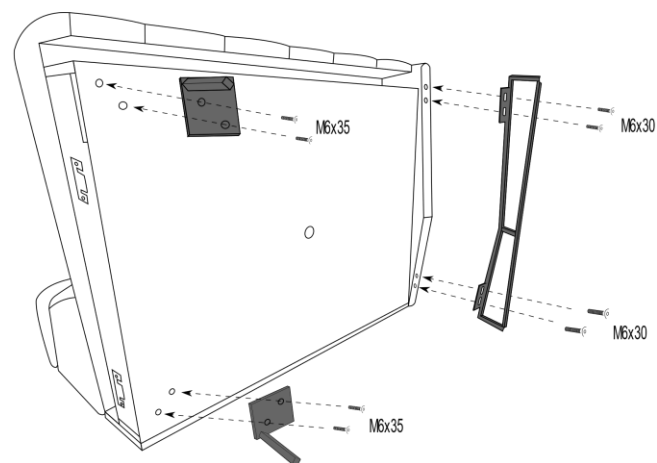

6

