

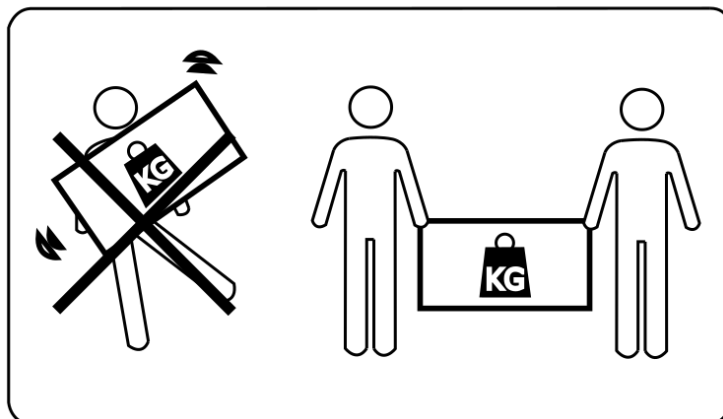
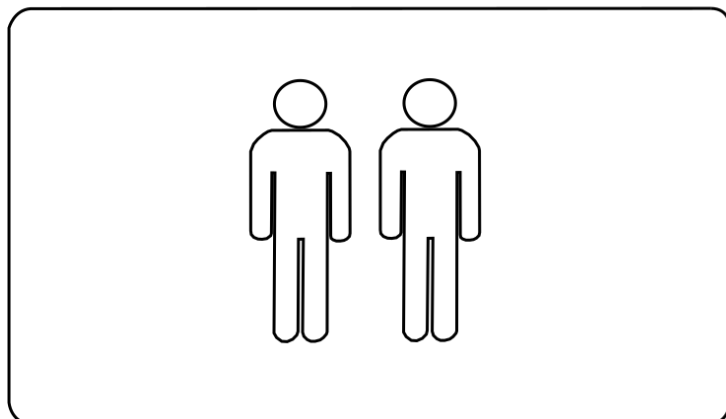
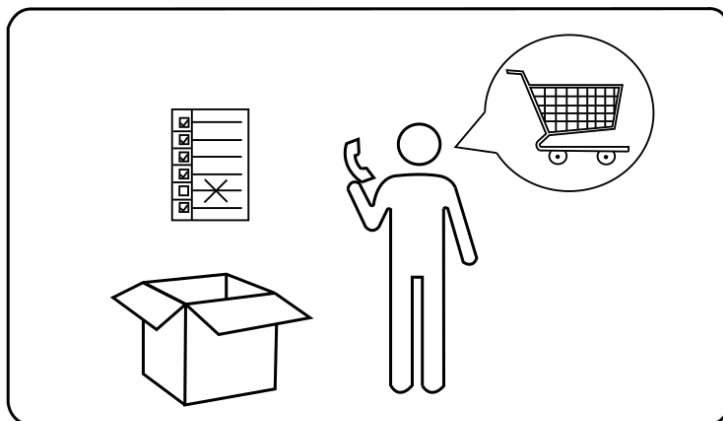


## SURINKIMO INSTRUKCIJA / ASSEMBLY INSTRUCTION / ИНСТРУКЦИЯ ПО МОНТАЖУ

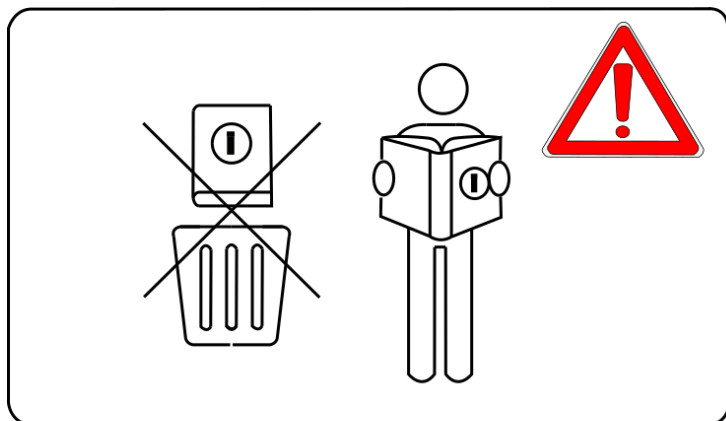


# KAPRI pufas

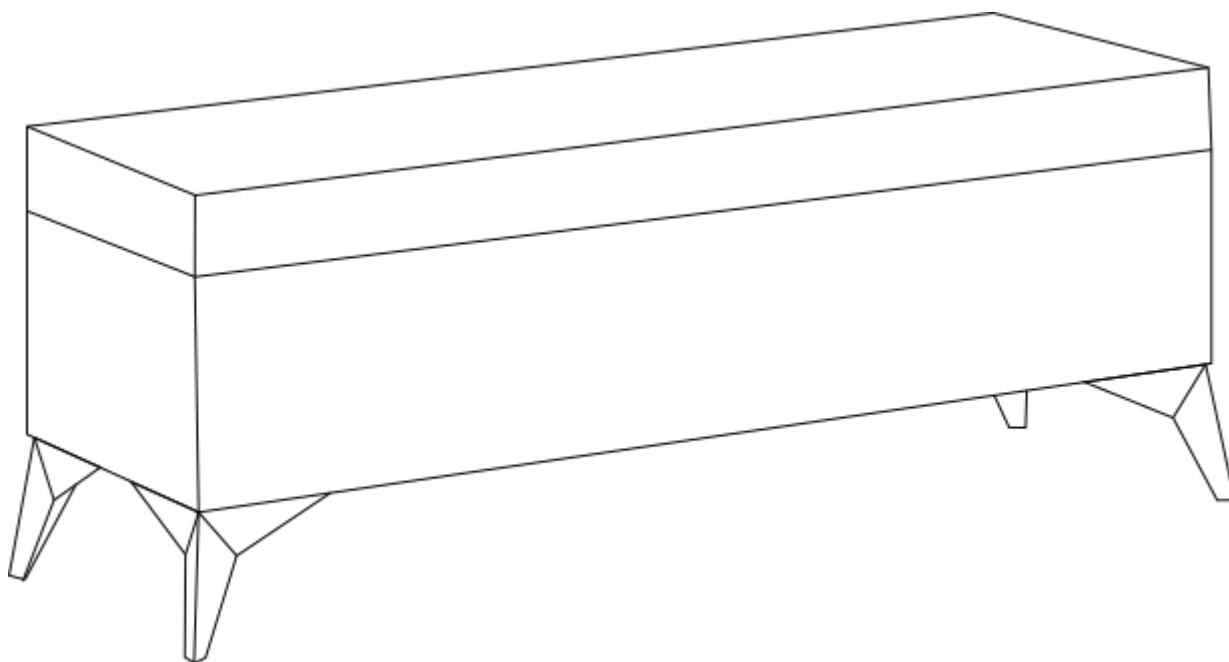


KAPRI pouf

KAPRI пуф

**A**

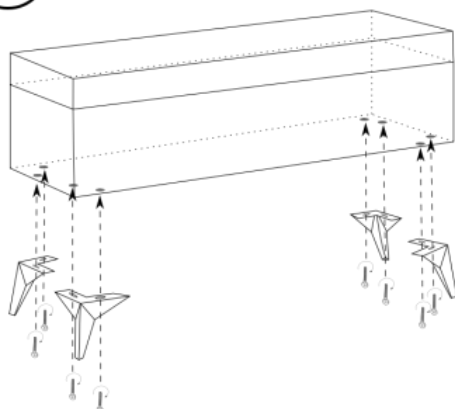
Kojos VYTISH135






	1 vnt.
	M6x20 - 8 vnt.
	4 vnt.

**B**

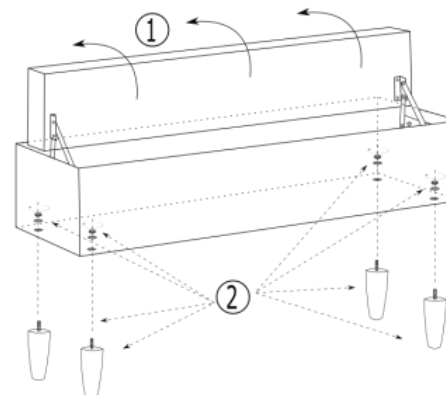
Kojos K50 / K100 / K130






	M8 - 4 vnt.
	M8 - 4 vnt.
	4 vnt.

**C**

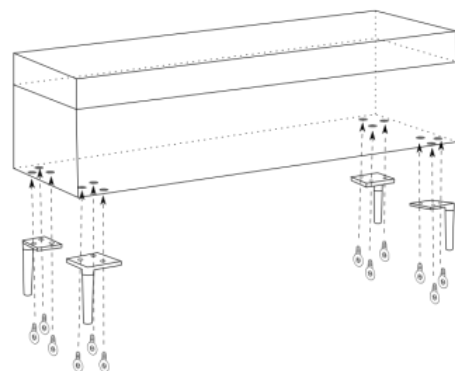
Kojos JAZZH150






	1 vnt.
	M8x20 - 12 vnt.
	4 vnt.

**D**

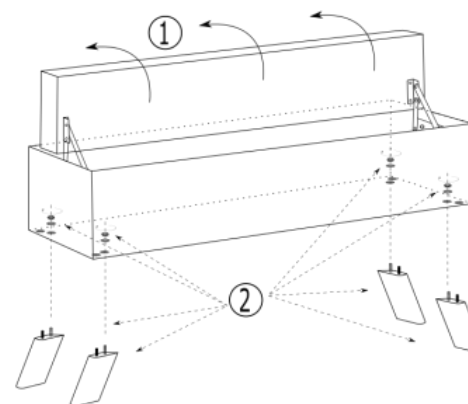Kojos DA130



	M8 - 4 vnt.
	M8 - 4 vnt.
	4 vnt.